


DSLlink
PPPoE Router


Para acessar configuração do modem, abra seu navegador e na barra de endereço digite: 192.168.1.1 e tecle Enter.

A tela seguinte tela será apresentada: coloque em User Name: root e Password: root

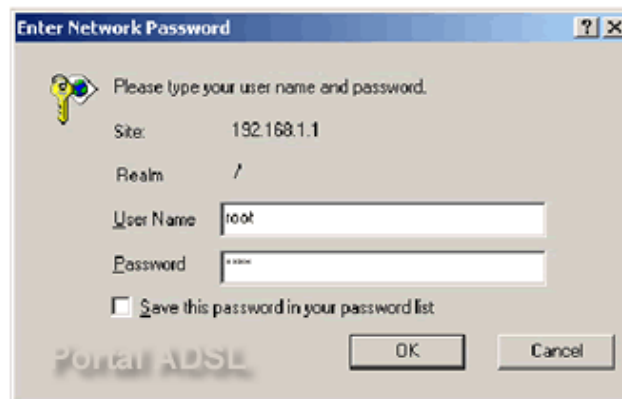


Inicialmente deveremos reiniciar o modem para suas configurações de fábrica, para isso siga os passos demonstrados a seguir:


1 - Clique na aba admin:

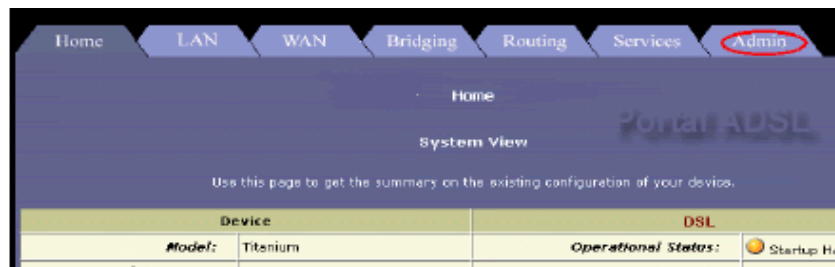


2 - Clique no link Commit & Reboot:

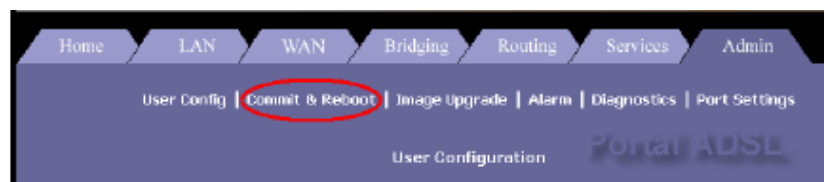

3 - Em Reboot Mode, selecione "Reboot From Default Configuration" e em seguida Reboot:

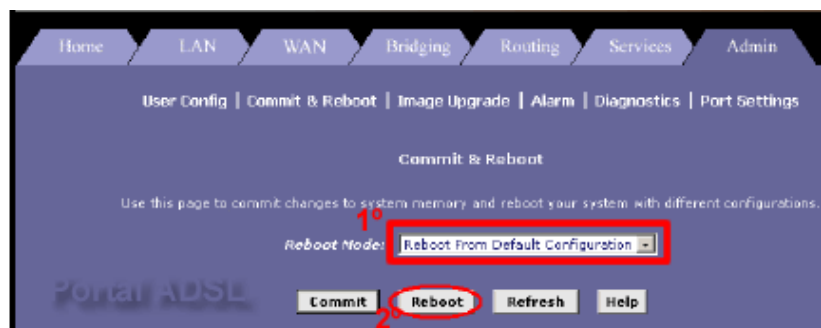


4 - Configuração do modem, clique na aba WAN:

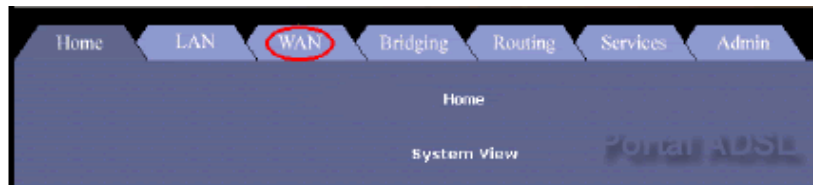

5 - ATM VC



6 - Clique no Lápis que existe no campo Action:

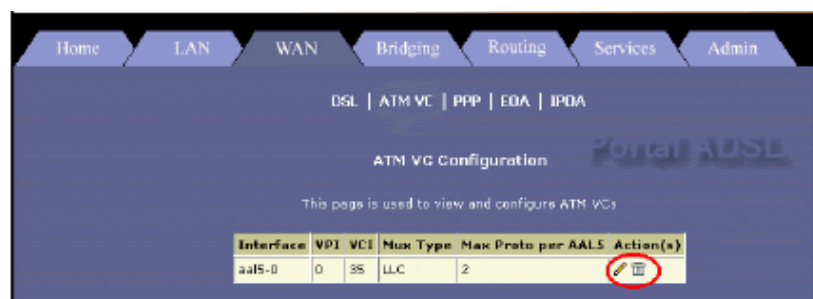

7 - Altere o valor do campo Mux Type para LLC, nos campos VPI e VCI altere com os valores de sua operadora telefônica. Após preenchido clique em Submit:

VPI e VCI (Virtual Path Identifier e Virtual Channel Identifier) : Camadas do protocolo de Internet, para identificação do canal e caminho de uso de uma operadora. Para a Oi - BrasilTelecom de todos os estados em que ela opera use o VPI 0 e VCI 35, exceto Rio Grande do Sul onde VPI 1 e VCI 32. Para a Oi Velox - Telemar VPI 0 e VCI 33

The screenshot shows the 'ATM VC Interface - Modify' form. It has a 'Basic Information' section with the following fields:

- VC Interface: aal5-0
- VPI: 0 (highlighted with a red box)
- VCI: 35 (highlighted with a red box)
- Mux Type: LLC (dropdown menu)
- Max Proto per AAL5: 2

At the bottom of the form, there are three buttons: Submit (circled in red), Cancel, and Help. The 'Portal ADSL' logo and copyright notice 'Copyright © 2001-2002 GlobespanVirata, Inc. All rights reserved.' are visible at the bottom.


8 - Agora clique em Close para fechar a janela:



9 - Agora clique em PPP:



10 - Clique no ícone do lápis no campo Action:

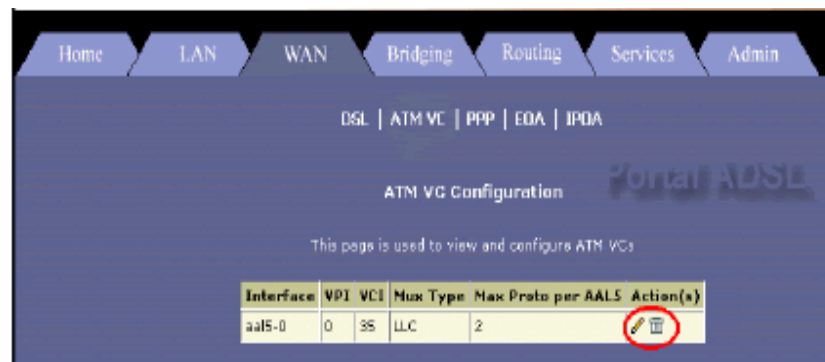

11 - Altere o campo status para "Start On Data", em Login digite: usuário@localturbo.com.br e a senha fornecida pelo provedor. Após preenchido clique em Submit:


PPP Interface - Modify

Basic Information	
<i>PPP Interface:</i>	ppp-0
<i>ATM VC:</i>	aal5-0
<i>Protocol:</i>	PPPoE
<i>Service Name:</i>	-
<i>Default Route:</i>	Enabled
<i>Status:</i>	StartOnData ▾


Security Information	
<i>Security Protocol:</i>	<input checked="" type="radio"/> PAP <input type="radio"/> CHAP
<i>Login Name:</i>	usuario@provedor
<i>Password:</i>	*****

Copyright © 2001-2002 GlobespanVirata, Inc. All rights reserved.


12 - Clique em close:

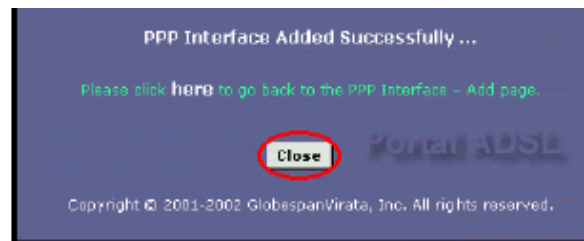


13 - Clique na lixeira associada a interface eoa-0 para excluir;

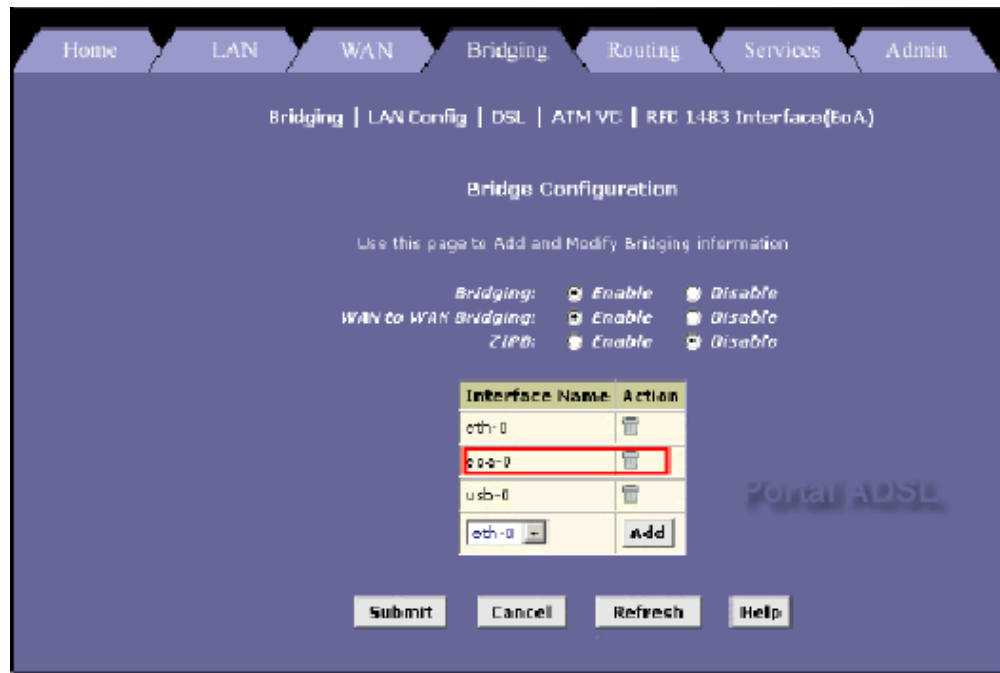

14 - Clique em OK para confirmar;

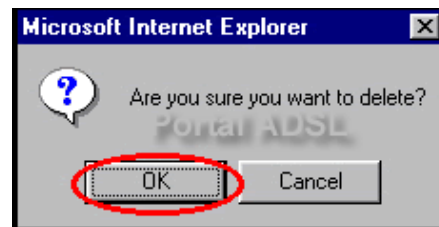

15 - Clique em RFC 1483 Interface(EoA);

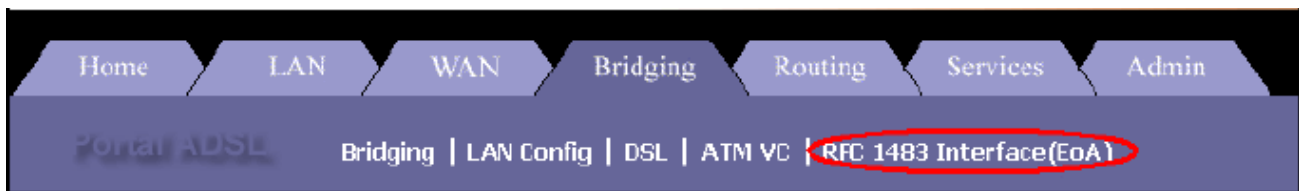

16 - Clique na lixeira para excluir;

Home | LAN | WAN | Bridging | Routing | Services | Admin

Bridging | LAN Config | DSL | ATM VC | RFC 1483 Interface(EoA)

RFC1483/Ethernet over ATM(EoA) Config


This Page is used to View, Add, Modify and Delete EOA Interfaces.

Interface	Interface Sec Type	Lower Interface	Config IP Address	Netmask	Use DHCP	Default Route	Gateway Address	Status	Action
eoa-0	Public	aal5-0	0.0.0.0	0.0.0.0	Disable	Disable	0.0.0.0		

Add Refresh Help

Portal ADSL

17 - Clique em OK para confirmar;

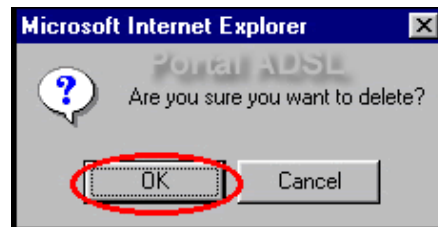

18 - Para gravar a configuração no modem, clique na aba Admin;

Home | LAN | WAN | Bridging | Routing | Services | Admin

Home

System View

Use this page to get the summary on the existing configuration of your device.

Device		DSL	
#Model:	Titanium	Operational Status:	Startup Ha

19 - "Commit & Reboot"


Home | LAN | WAN | Bridging | Routing | Services | Admin

User Config | Commit & Reboot | Image Upgrade | Alarm | Diagnostics | Port Settings

User Configuration

Portal ADSL

20 - Botão Commit;

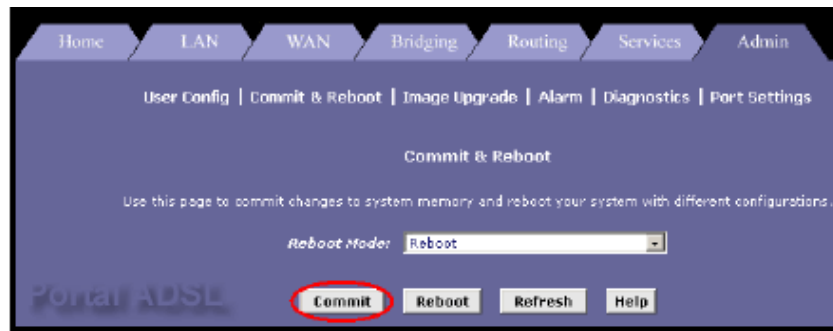

21 - Pronto, agora basta navegar normalmente através de seu navegador.